

SPECIFICATION SHEET

MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

SPECIFICATION SHEET NO.	S0418- CU6M00000S001		
ORIGINAL MFG/PART NO.	TGS Crystals/CRAR 6.0MG TLH/ZTACR6.00MG55HC0-R0		
NEXTGEN PART CODE	CU6M00000S001 Indicate This Code For RFQ /Order		
DATE	Apr. 18, 2025		
REVISION	A3 Updated With Most Recent Data		
DESCRIPTION AND	MHz SMD Ceramic Resonator, 3 Pads, Case 4520, CU Series		
MAIN PARAMETRICS	Dimension L4.5*W2.0*H	1.2mm, Without Built-in Capacitance,	
IVIAIN PARAIVIETRICS	6.0MHz, Frequency Accuracy ±0.5%;		
	Operating Temp. Range -	25°C ~+85°C	
	Reflow Profile Condition 260 °C Max.		
	Package in Tape/Reel, 3000pcs/Reel		
	REACH/RoHS/RoHS III Compliant, RoHS Annex III lead Exemption		
	(Exempt per RoHS EU 2015/863)		
CUSTOMER			
CUSTOMER PART NUMBER			
CROSS REF. PART NUMBER			
МЕМО			

VENDOR APPROVE

Issued/Checked/Approved







Date: Apr. 18, 2025

CUSTOMER APPROVE	
Date:	



PART CODE: **CU6M00000S001**MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

MAIN FEATURE

- MHz SMD Ceramic Resonator, 3 pads, Case 4520
- Case Dimension L4.5*W2.0*H1.2mm
- Without Built-in Capacitance
- Low Cost And Short Shipment
- Cross More Competitors Part
- Reflow Profile Condition 260 °C Max.
- REACH/RoHS/RoHS III compliant, RoHS Annex III lead Exemption (Exempt per RoHS EU 2015/863)



Image shown is a representation only. Exact specifications should be obtained from the product dimension.





APPLICATION

- Communication Electronics and More
- · Bluetooth, Wireless Communication Set

ELECTRICAL CHARACTERISTICS

- See Page 6 ~Page 7
- All Parameters are Subject To NextGen Components' Final Confirmation



PART CODE: **CU6M00000S001**MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

HOW TO ORDER

• Please Follow Up Part Code Guide And Indicate NextGen Part Code <u>CU6M000000S001</u> For RFQ and Order.

PART CODE GUIDE




CODE	NAME	KEY SPECIFICATION OPTION
CU	Product Series	MHz SMD Ceramic Resonator,3 pads, Case 4520 Dimension L4.5*W2.0*H1.2mm, Without Built-in Capacitance
6M0	Frequency Range	6M0: 6.000MHz
00000S	Internal Control	Letter or Digits (A~Z, a~z or 0~9)
001	Special Parametric	Letter or Digits (A~Z, a~z or 0~9)
- XX	Suffix	Blank: N/A XX: Internal Control Code, Letter A~Z, a~z or digits (0~9) for Special/Custom Parameters




MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

DIMENSION - Unit: mm, Case 4520, 3 Pads L4.5*W2.0*H1.2mm


Top View

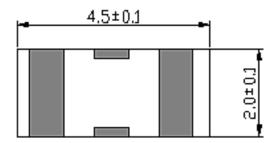


Side View

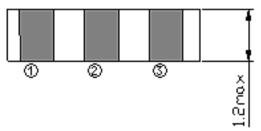

Bottom View

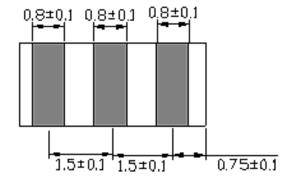


Recommended Land Pattern

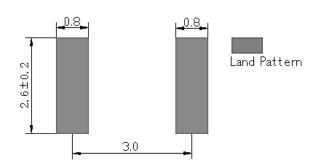

4/18/2025 4

MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

STRUCTURE

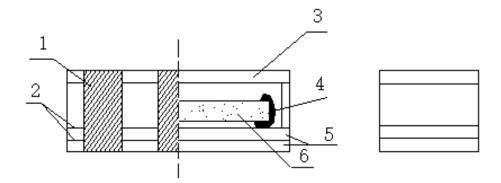


NO.	COMPONENTS	MATERIALS
1	Outer Electrodes	Top and Bottom Electrodes Ag + Ni(under plating) + Sn(over plating) Side Electrodes Ni + Cu + Ag(under plating)+Sn(over plating)
2	Glue	Epoxy Resin
3	Cover	Dielectric Material
4	Conductive Adhesive	Ag + Epoxy Resin
5	Base	Dielectric Material
6	Ceramic Element	Piezoelectric Ceramics (PZT) + Ag

MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

MEASUREMENT

- Parts shall be tested under the condition (Temp.: $20\pm15^{\circ}$ C, Humidity $65\pm20\%$ R.H.) unless the standard condition (Temp.: 25 ± 3 °C, Humidity : $65\pm10\%$ R.H.) is regulated to measure.
- Measuring Circuit

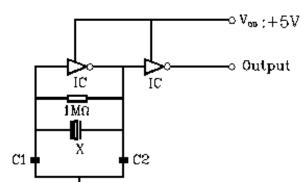

IC: 1/6TC4069UBPx2

X: Ceramic Resonator

C1, C2: 30pF

GENERAL ELECTRICAL CHARACTERISTICS AND RATING - FOR DIFFERENT PART CODE- Ta = 25°C

PARAMETER	SYMBOLS	VALUE	UNITS	CONDITION
Withstanding Voltage	-	50	V	@DC, 1 min.
Insulation Resistance	Ri	500 Min.	mΩ	@10V, 1min.
Operating Temperature Range	TJ	-25 to +85	°C	
Storage Temperature Range	T stg	-55 to +85	°C	
Rating Voltage	U R	6	V DC	
		15	V p-p	
Temperature Coefficient of Oscillation Frequency		±0.3 Max.	%	Oscillation Frequency drift, -25°C ~ +85°C
Oscillation Frequency Aging Rate (10 Years) *		±0.2 Max.	%	From initial value

Note: * : Components shall be left in a chamber of +85±2 °C for 1000 hours, then measured after leaving in natural condition for 1 hours.

4/18/2025 6



MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

ELECTRICAL CHARACTERISTICS - FOR DIFFERENT PART CODE

PART CODE	CENTER FREQUENCY (F0)	FREQUENCY ACCURACY	MAX.RESONANT IMPEDANCE R0	IC MODEL NO.
	MHz	%	Ω	
CU4M000000S001	4.000	±0.5	40	1/6TC4069UBPx2
CU6M000000S001	6.000	±0.5	40	1/6TC4069UBPx2
CU8M000000S001	8.000	±0.5	40	1/6TC4069UBPx2



MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

PHYSICAL AND ENVIRONMENTAL CHARACTERISTICS

TEST ITEMS	TEST METHOD AND CONDITIONS	REQUIREMENT
Humidity	Keep the resonator at $40^{\circ}\text{C}\pm2^{\circ}\text{C}$ and 90% - 95% RH for 96h. Then Release the resonator into the room Condition for 1h prior to the Measurement.	It shall fulfill the specifications in Table 1.
High Temperature	Subject the resonator to 85°C \pm 2°C for 96h, then release the resonator into the room conditions for 1h prior to the measurement.	It shall fulfill the specifications in Table 1.
Low Temperature	Subject the resonator to -55°C \pm 2°C for 96h, then release the resonator into the room conditions for 1h prior to the measurement.	It shall fulfill the specifications in Table 1.
Temperature Cycling	After temperature cycling of blow table was performed 5 times, resonator shall be measured after being placed in natural conditions for 1h. Temp.: -25±3°C, Time: 30±3 min; Temp.: 85±3°C, Time: 30±3 min.	It shall fulfill the specifications in Table 1.
Vibration	Subject the resonator to vibration for 2h each in x_x y and z axis With the amplitude of 1.5mm, the frequency shall be varied uniformly between the limits of 10 Hz—55Hz.	It shall fulfill the specifications in Table 1.
Mechanical Shock	Drop the resonator randomly onto a wooden floor from the height of 100cm 3 times.	It shall fulfill the specifications in Table 1.
Soldering Test	Passed through the re-flow oven under the following condition and left at room temperature for 1h before measurement	It shall fulfill the specifications in Table 1.
Solderability	Dipped in 245°C \pm 5°C solder bath for 3s \pm 0.5 s with rosin flux (25wt% ethanol solution.). see <i>Suggested Reflow Profile</i>	The terminals shall be at least 95% covered by solder.
Board Bending	Mount on a glass-epoxy board(width =40mm, thickness=1.6mm),then bend it to 1mm displacement(velocity= 1mm/s) and keep it for 5s.	Mechanical damage such as break shall not occur


MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

Table 1


TEST ITEMS	CHARACTERISTICS AFTER TEST	
	VALUE	UNITS
Oscillation Frequency Change △Fosc/Fosc	±0.3 Max	%
Resonant Impedance \triangle Ro	40 Max.	Ω

Note: The limits in the above table are referenced to the initial measurements.


Soldering Test

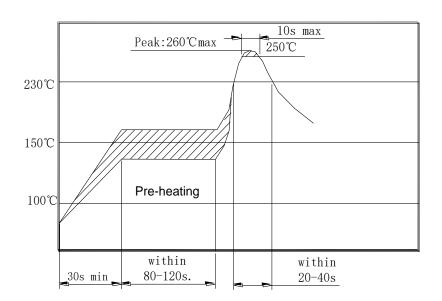

Board Bending

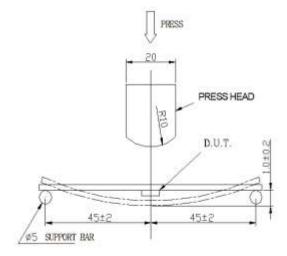


SUGGESTED REFLOW PROFILE - FOR REFERENCE ONLY

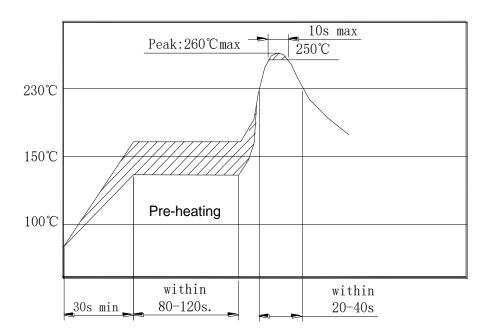


MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

TPAE/REEL DIMENSIONS - Unit: mm

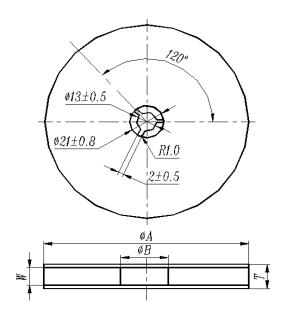


CODE	DIMENSION	
фА	180±3.0	
фВ	60 Min.	
W	12.4 Min.	
Т	19.4 Max.	
Qty. Per Reel	3000pcs	
Carrier Tape Size	12	

Packing Method Sketch Map

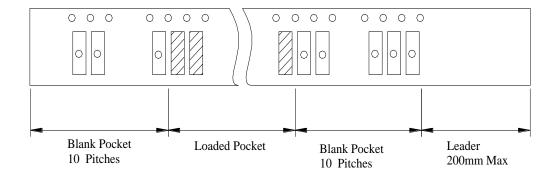

Test Condition Of Peeling Strength

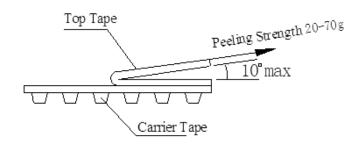



PART CODE: **CU6M00000S001**MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

CAUTION

- Don't apply excess mechanical stress to the component and terminals at soldering. Do not use this product with bend.
- Do not clean or wash the component for it is not hermetically sealed.
- Do not use strong acidity flux, more than 0.2wt% chlorine content, in flow soldering.
- Don't be close to fire.
- This specification mentions the quality of the component as a single unit. Please ensure the component is thoroughly evaluated in your application circuit
- Expire date (Shelf life) of the products is 12 months after delivery under the conditions of a sealed and an
 unopened package. Please use the products within 12 months after delivery. If you store the products for a
 long time (more than 12 months), use carefully because the products may be degraded in the solder-ability or
 rusty. Please confirm solder-ability and characteristics for the products regularly.
- Exposure components under soldering condition that is exceeding our recommendation will increase the failure dangerous.
- Please contact us before using the product as automobile electronic component.
- Please return one of these specifications after your signature of acceptance.
- When something gets doubtful with this specifications, we shall jointly work to get an agreement.
- For questions on technology, prices and delivery, please contact our sales offices or e-mail: sales@NextGenComponent.com .



MHZ SMD CERAMIC RESONATOR CASE 4520 CU SERIES

IMPORTANT NOTES AND DISCLAIMER

- ROHS COMPLIANCE: The levels of RoHS restricted materials in this product are below the maximum
 concentration values (also referred to as the threshold limits) permitted for such substances, or are used in an
 exempted application, in accordance with EU RoHS Directive (EU) 2015/863 EC (RoHS3). RoHS Test Report for
 this product can be obtained at Download Center.
- REACH COMPLIANCE: REACH substances of high concern (SVHCs) information is available for this product.
 Since the European Chemical Agency (ECHA) has published notice of their intent to frequently revise the SVHC listing for the foreseeable future, REACH Test Report for this product can be obtained at Download Center.
- All Product parametric performance is indicated in the Electrical Characteristics for the listed herein test
 conditions, unless otherwise noted. Product performance may not be indicated by the Electrical
 Characteristics if operated under different conditions.
- 4. NextGen Component, Inc (*NextGen*) reserves the right to make changes to this document and its products and specifications at any time without notice. Customers should obtain and confirm the latest product information and specifications before final design, purchase or use.
- 5. NextGen makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, not does NextGen assume any liability for application assistance or customer product design.
- 6. NextGen does not warrant or accept any liability with products which are purchased or used for any unintended or unauthorized application. No license is granted by implication or otherwise under any intellectual property rights of NextGen.
- 7. NextGen products are not authorized for use as critical components in life support devices or systems without express written approval by NextGen.
- 8. NextGen requires that customers first obtain an RMA (Returned Merchandise Authorization) number prior to returning any products. Returns must be made within 30 days of the date of invoice, be in the original packaging, unused and like-new condition. At the time of quoting or purchasing, a product may say that it is Non-Cancelable/ Non-Returnable (NCNR). These products are not returnable and not refundable.